



Circle Set

I.D. Jewelry and Design

Supply list

Earrings - easy - FREE BONUS PATTERN

- 20 gauge wire - 5" or 12.5cm
- 24 gauge wire - 2 pieces 8" or 20cm each
- 10 Swarovski Crystals
- 2 coordinated beads, 2 fish hook earrings


Earrings - Circle

- 20 gauge wire - 4 pieces - 4" or 10cm each (ball the ends)
- 26 gauge wire - 6" or 180cm
- 2 rings soldered shut - 18 gauge - approx. 2cm in diameter
- 6 Swarovski Crystals bicones- 4mm - 2 of each colour
- 4 small jump rings, 2 fishhook earrings

Pendant - Circle

- 20 gauge wire - 2 pieces wire - 4 3/4" or 12cm each (ball the ends)
- 26 gauge wire - 3' or 90cm
- Ring solder shut - 18 gauge - approx 2cm in diameter
- Swarovski crystals bicones- 2 - 4mm and 1 - 6mm
- 2 jump rings and an 18" finished chain to wear your pendant on

Earrings - easy

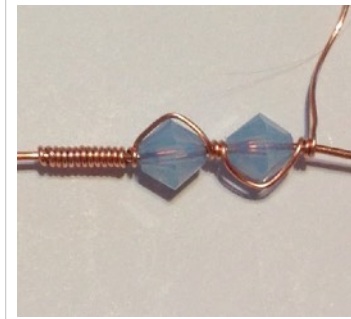

1. Start 1/2" or 13mm away from the left side. Leave a small tail with the 24 gauge wire. Wrap a few times around the base wire. Go back to the beginning and wrap the tail wire around the base. Wrap a total of 14 times around the base wire. Press the tail with your pliers to secure wire.



After 14 wraps, add Crystal, run wire over bead, wrap wire 3 times. Add bead. Repeat these steps until you have all 5 beads on your wire. Wrap 14 wraps after last bead.



Form your wrapped wire into a circle or a loop. Put the short wire over the long wire end.



Wrap short end around long wire twice. Trim short wire off close to long wire. Press with your pliers, over cut end, to secure.



Add complimentary colored bead. Put pointed pliers, over wire & against the top bead. Bend wire to the right 90 degrees.



With round nosed pliers, bend wire back into a small loop. Leave pliers in loop.



Wrap wire under loop to fill in gap. Trim excess wire, press wire end against base wire with pliers to secure. Add fish hook earring to top. Repeat for other earring.

Antique in liver of sulphur (optional)




Pendant - circle



For the pendant, place your ring on a ring mandrel and wrap your wires around the exact spot your ring sits on it. Make sure you have even amounts of wire on each side. (If you don't have a mandrel wrap them around your finger that's the same size as your ring)



Leave a 1" or 25mm space from the left and attach weaving wire to one of the loose wires. Wrap that wire 2x to secure it. Add the ring below that wire. Wrap the ring and the wire together twice. Wrap the loose wire once **(if wires oxidized, run them through sandpaper)**

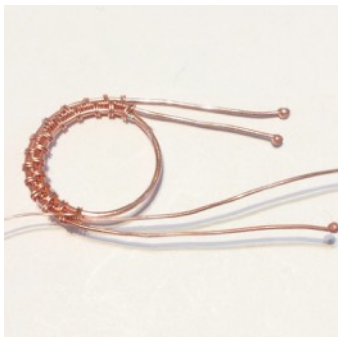


Add the last loose wire above the last wire. Wrap the middle and top wire 2x. Then wrap the centre wire once. Repeat for this pattern for half of the ring, making sure you leave the solder joint exposed. Leave the weaving wire attached.



This part of the pendant you're working on is the bottom of the pendant. Pictures say a thousand words so pay close attention to them to understand how I did this part. With the bottom facing the top, gently curl the top two wires to the right leaving smooth loops.



With the bottom wire, make a second loop and trap the top wire in the centre of it

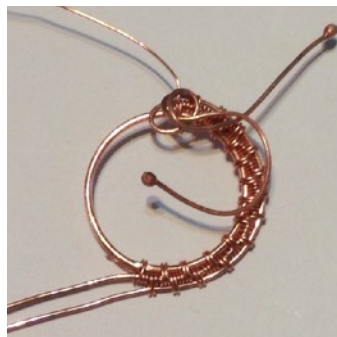

Take the top wire and make another loop going the opposite direction making sure you trap the bottom wire in it. With the bottom wire make a loop in the opposite direction. Run the end of the wire back through the top loop



Top wire loop



Run the top wire back through the bottom loop. If you have more wire left, continue making flowing lines.



With attached weaving wire, wrap the ring 5 times.



Thread on one of your 4mm bicones. Wrap the ring twice to secure it.



Thread on 6mm Crystal, leave a gap then bend the bead back onto the wire to place the bead so they will all sit snugly together. Wrap the ring twice. Add the last 4mm Crystal, wrap the ring twice. From the back, run your weaving wire back through the 6mm bead then between the two 4mm.



Wrap the ring twice. Start wrapping the ring right after the crystals. Continue wrapping the rest of the ring, leaving the weaving wire attached at the top.



Again, follow the pictures if my explanation is too confusing. Curl the top wire to the left in a soft arch.

Curl the bottom wire into a loop trapping the top wire in the centre.



Curl the top wire into another loop.

Curl the bottom wire into a hook and wrap around the ring.

With attached weaving wire, add a few stitches around the loops to secure. Cut off the wire and repeat for the bottom pattern.



Add two jump rings to one of your top loops, this will be your bail.
Patina with liver of sulphur. Clean off some of the patina, leaving it in the nooks and crannies to give it some depth.
Add chain and enjoy!




Earrings - Circle




MAKE SURE YOU MAKE BOTH EARRINGS AT THE SAME TIME.


(So they look identical when you're done) For the earrings, place your ring on a ring mandrel and wrap your wires around the exact spot your ring sits on it. Make sure you have even amounts of wire on each side. (If you don't have a mandrel wrap them around your finger that's the same size as your ring)

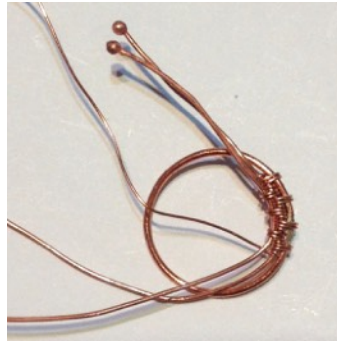


Leave a 1" or 25mm space from the left and attach weaving wire to one of the loose wires. Wrap that wire 2x to secure it. Add the ring above that wire. Wrap the ring and the wire together twice. Wrap the loose wire once. (**If wires have oxidized run them through some sandpaper to clean**)

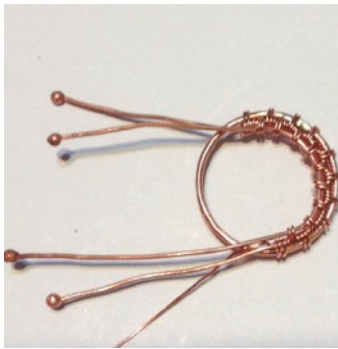

Add the last loose wire below the last wire. Wrap the middle and bottom wire 2x. Then wrap the centre wire once. Repeat this pattern for half of the ring, making sure you leave the solder joint exposed. Leave the weaving wire attached.

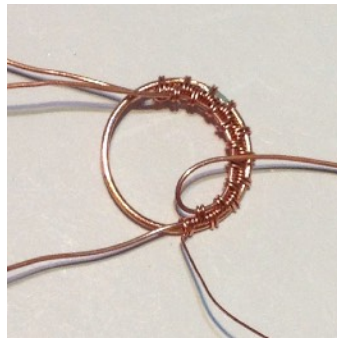



This part of the earrings you're working on is the bottom. Pictures say a thousand words so pay close attention to them to understand how I did this part. With the bottom facing the top, gently curl the top two wires to the right leaving smooth loops.

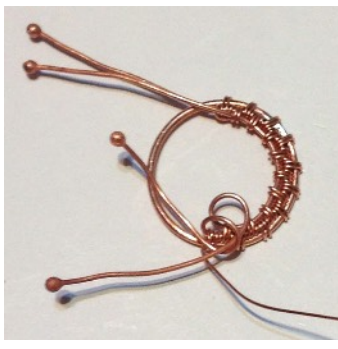

With the bottom wire, make a second loop and trap the top wire in the centre of it



Take the top wire and make another loop going the opposite direction making sure you trap the bottom wire in it. With the bottom wire make a loop in the opposite direction. Run the end of the wire back through the top loop

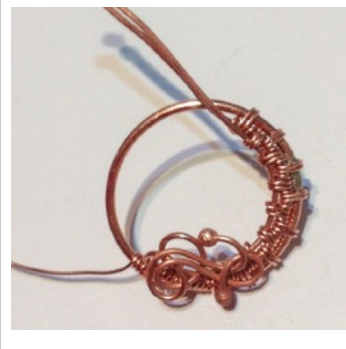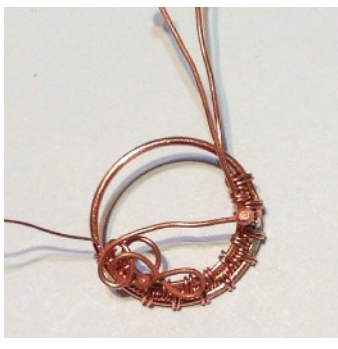

Run the top wire back through the bottom loop. If you have more wire left, continue making flowing lines. With attached weaving wire, wrap the ring 5 times. Thread on one of your 4mm bicones. Wrap the ring twice to secure it.




Earrings - Circle




MAKE SURE YOU MAKE BOTH EARRINGS AT THE SAME TIME.


(So they look identical when you're done) For the earrings, place your ring on a ring mandrel and wrap your wires around the exact spot your ring sits on it. Make sure you have even amounts of wire on each side. (If you don't have a mandrel wrap them around your finger that's the same size as your ring)

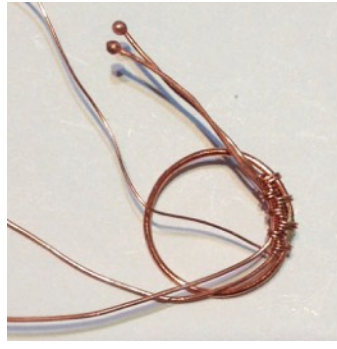


Leave a 1" or 25mm space from the left and attach weaving wire to one of the loose wires. Wrap that wire 2x to secure it. Add the ring above that wire. Wrap the ring and the wire together twice. Wrap the loose wire once. (**If wires have oxidized run them through some sandpaper to clean**)

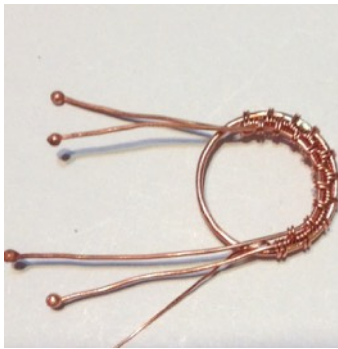


Add the last loose wire below the last wire. Wrap the middle and bottom wire 2x. Then wrap the centre wire once. Repeat this pattern for half of the ring, making sure you leave the solder joint exposed. Leave the weaving wire attached.

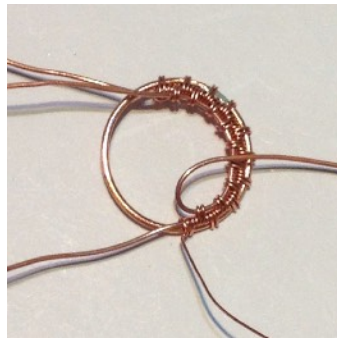



This part of the earrings you're working on is the bottom. Pictures say a thousand words so pay close attention to them to understand how I did this part. With the bottom facing the top, gently curl the top two wires to the right leaving smooth loops.

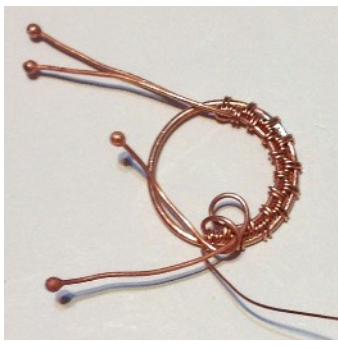

With the bottom wire, make a second loop and trap the top wire in the centre of it

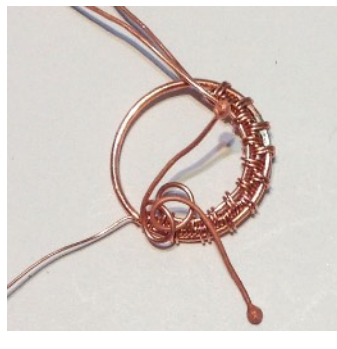

Take the top wire and make another loop going the opposite direction making sure you trap the bottom wire in it. With the bottom wire make a loop in the opposite direction. Run the end of the wire back through the top loop

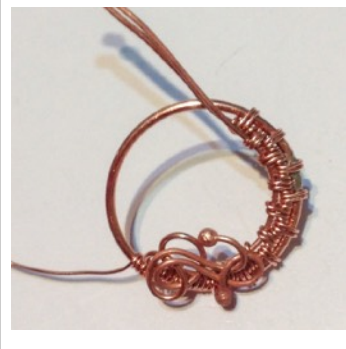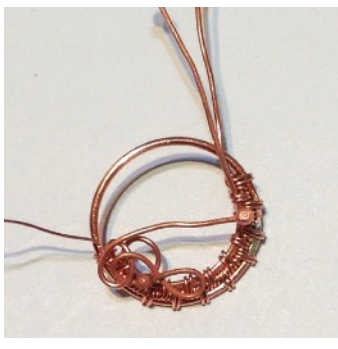


Run the top wire back through the bottom loop. If you have more wire left, continue making flowing lines. With attached weaving wire, wrap the ring 5 times. Thread on one of your 4mm bicones. Wrap the ring twice to secure it.





Thread on 4mm Crystal, leave a gap then bend the bead back onto the wire to place the bead so they will all sit snugly together. Wrap the ring twice. Add the last 4mm Crystal, wrap the ring twice. From the back, run your weaving wire back through the 6mm bead then between the two 4mm.

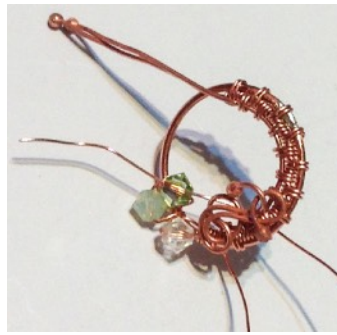

Wrap the ring twice. Start wrapping the ring right after the crystals. Continue wrapping the rest of the ring, leaving the weaving wire attached at the top.



Again, follow the pictures if my explanation is too confusing. Curl the top wire to the left in a soft arch.

Curl the bottom wire into a loop trapping the top wire in the centre.



Curl the top wire into another loop.



Continue curling so you have one complete loop. That's where you'll add the jump rings and the fishhook. With the attached weaving wire, sew some stitches to secure your loops to the earring. Cut weaving wire. Repeat for bottom curls.



Add jump rings and fish hooks to each earring.

Patina with Liver of Sulphur. Remove some of the antiquing with an abrasive to leave the colour in the nooks and crannies. (Optional)



Complete set

I.D. Jewelry and Design
www.idjewelryanddesign.com
idjewelryanddesign@gmail.com
 416-843-9991